




FITTING A NEW COMB TO TOP PULLEY

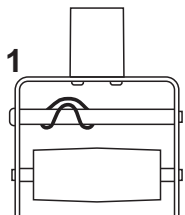

1
Wrap 'O' Ring around the aluminium rod.

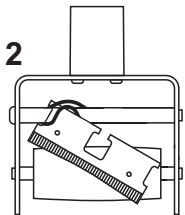


2
Slide the notch in one end of the comb into both loops.

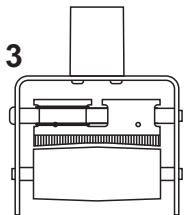


3
Drag both loops into center slot.


FITTING AN OLD COMB TO TOP PULLEY

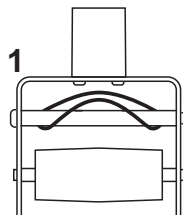

1
Wrap 'O' Ring around the aluminium rod.

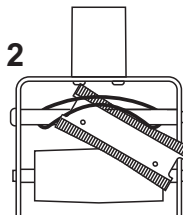


2
Slide the notch in one end of the comb into both loops.

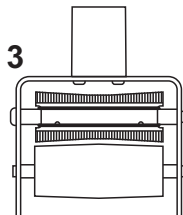


3
Drag both loops into notch at other end of comb.


FITTING A NEW COMB TO TOP PULLEY

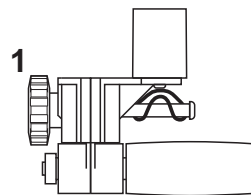

1
Wrap 'O' Ring around the aluminium rod.

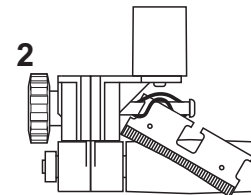


2
Slide the notch in one end of the comb into both loops.

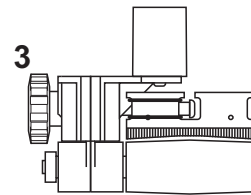


3
Drag both loops into center slot.


FITTING A NEW COMB TO BOTTOM PULLEY

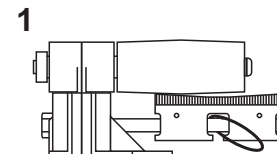

1
Loop 'O' Ring around the rod and through the comb middle slot.

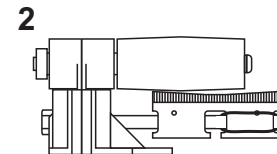

2
Loop free end of 'O' Ring around end of the rod.

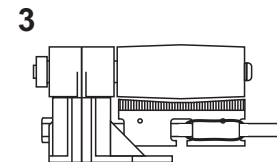

3
Slide comb to correct position.

Note: The bottom pulleys of some old machines can accept old or new combs fitted similar to methods shown above.